



Mini Strobe Light

OWNER'S MANUAL — Please read before using this equipment.

Your RadioShack Mini Strobe Light creates a unique lighting atmosphere. It is simple to install, and you can vary its flash rate to make people appear as though they are “frozen” or moving in slow motion.

Your Mini Strobe Light is ETL listed to UL standards and meets all applicable FCC requirements.

WARNING: To reduce the risk of fire or shock hazard, do not expose this product to rain or moisture.

	CAUTION RISK OF ELECTRIC SHOCK. DO NOT OPEN.	
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.		



This symbol is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case.



This symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.


SETUP

You can place the Mini Strobe Light on any flat surface, such as a desk or table, or you can mount it on a ceiling or wall.

Choose a location for the Mini Strobe Light that is:


- out of the way of normal activities
- near an AC outlet
- sturdy enough for ceiling or wall mounting

Ceiling or Wall Mounting

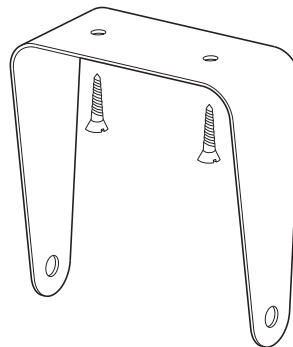

1. Using the supplied mounting bracket as a template, mark the locations for the mounting screws (not supplied).
2. Drill two holes, $\frac{1}{8}$ inch in diameter, at the marked locations.
3. Using a Phillips screwdriver and two screws (not supplied), securely attach the mounting bracket to the selected location.

4. Mount the Strobe Light on the mounting bracket using the supplied rubber washers and mounting knobs. After you position the front end of the Strobe Light to the desired angle, tighten the mounting knobs.

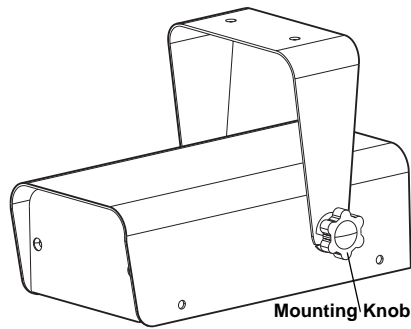

Using the Bracket as a Stand

When you use the Strobe Light on a flat surface, mount the bracket on the bottom of the Strobe Light using the supplied rubber washers and mounting knobs. After you position the front end of the Strobe Light to the desired angle, tighten the mounting knobs.

Connecting Power


Be sure the flash rate control knob on the back of the Strobe Light is set to **POWER OFF** (fully counterclockwise). Connect the AC cord's plug to a standard AC outlet.

Caution: This product is equipped with a three-wire grounding-type plug (a plug having a third pin). This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into your AC outlet, contact your electrician to replace your outlet. Do not defeat the safety purpose of the grounding-type plug with a two-prong adapter or by breaking the third pin off.

OPERATION

Warning: Do not look directly into the Strobe Light when it flashes.

To turn on the Strobe Light, turn the flash rate control knob clockwise until it clicks. To increase the flash rate, turn the knob clockwise; to decrease the flash rate, turn the knob counterclockwise.

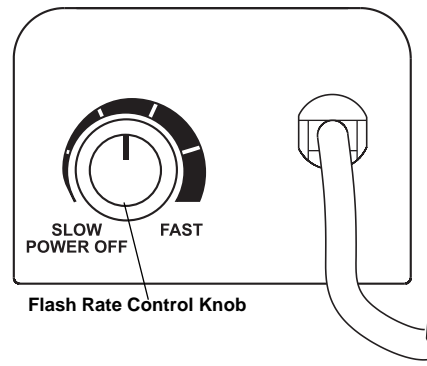

To turn off the Strobe Light, turn the flash rate control knob fully counterclockwise until it clicks. Unplug the Strobe Light from the AC outlet when not in use.

CARE

To enjoy your Mini Strobe Light for a long time:

- Keep the Strobe Light dry. If it gets wet, wipe it dry immediately.
- Use and store the Strobe Light only in normal temperature environments.
- Handle the Strobe Light gently and carefully. Do not drop it.
- Keep the Strobe Light away from dust and dirt.
- Wipe the Strobe Light with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the Mini Strobe Light's internal components can cause a malfunction and invalidate its warranty. If your Strobe Light is not performing as it should, take it to your local RadioShack store for assistance.

Changing the Strobe Tube

Warning: Allow the tube to cool before touching it, or use heat-resistant gloves when handling the tube.

If the strobe tube burns out, follow these steps to replace it.

1. Unplug the Strobe Light's AC cord from the outlet.
2. Using a Phillips screwdriver, remove the two screws and the lens from the front of the Strobe Light.
3. Grasp the black base of the strobe tube and carefully pull out the tube with socket.
4. Your Strobe Light requires a strobe tube with a minimum anode voltage of 200 and a maximum voltage of 550. You must replace the entire strobe tube, pre-soldered with socket (available through your local RadioShack store). Insert the new strobe tube with socket, and press securely in place.

Caution: Use only a strobe tube of the required size and voltage. Using a strobe tube that does not meet these specifications might damage the strobe tube or the Strobe Light.

5. Replace the lens and the two screws.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99